



LUCAS GIRLING Mounting

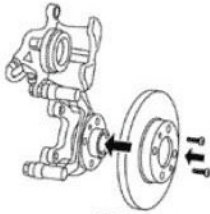


7

Fit the disc on the wheel hub

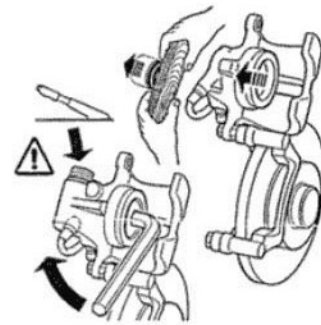


8

Push the piston back. On models with a handbrake, tighten the piston.

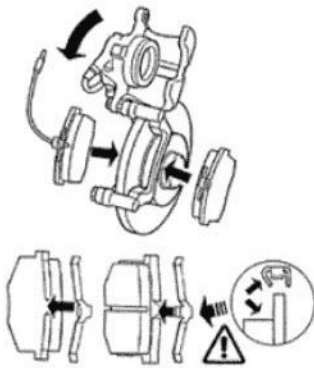

9

Introduce the new pads and turn the caliper.

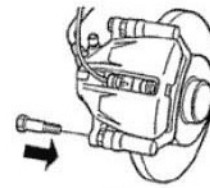


10

Reassemble the guide screw.



11

Reconnect the wear sensor and, if necessary, reposition it in its runners.

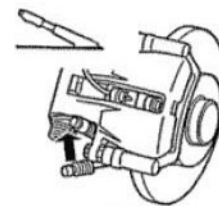

12

On models with a handbrake, reconnect the cable.



13

Depress the brake pedal several times to bring the pads together.


LUCAS GIRLING

Dismounting




1

Disconnect the wear sensor if necessary.

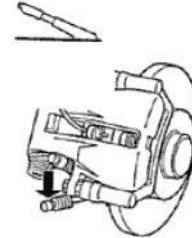


2

On models with a handbrake, detach the cable.

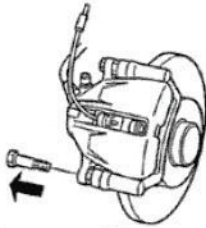


3

Remove the guide screw.

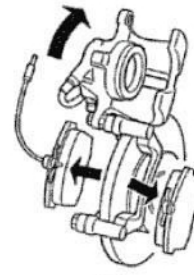


4

Turn the caliper and remove the worn pads.

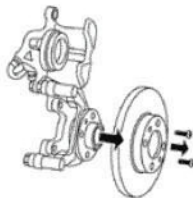

5

Remove the disc

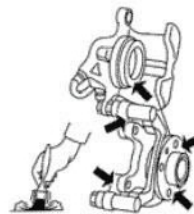

6

Dry clean the caliper and the wheel hub